
SAVE THESE INSTRUCTIONS

iRest

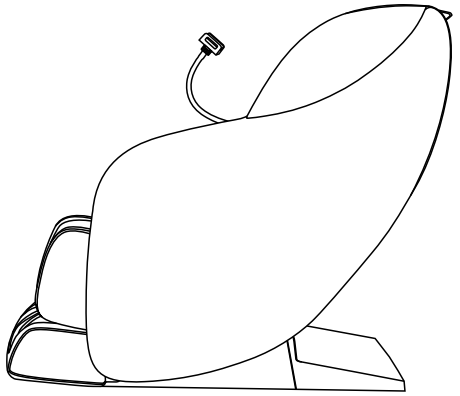

Enjoyfy (A2805)

MASSAGE CHAIR

Operation Instructions

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the manual, it is a normal update of the product, and our company will not inform you otherwise. The specific product function and color shall prevail in kind.

CONTENTS

Before use

Safety precautions ---------- 02-05
Installation parts ---------- 06-07
Place massage chair ---------- 08-09
Before use ---------- 10-11
Product structure ---------- 12-15

Usage method

Operation Instructions ---------- 16-26
End the massage ---------- 26

Maintain

Cleaning and Maintenance ---------- 27

Important

Troubleshooting ---------- 28
Product Specifications ---------- 29

Safety Precautions (Must be observed)

■Please read all relevant instructions carefully before use.
■The notes marked here will help you to use the product safely and correctly.
■In order to clearly indicate the extent of harm and damage, precautions are divided into **"Warning"** and **"Caution"** that may be caused by incorrect use. Both of them are important for safety and must be followed.

⚠ **Warning**	Indicates that serious injury or death may result from improper use.
⚠ **Caution**	Indicates that misuse may cause minor injury or property damage.

■Please pay attention to the symbol before each safety item.

⃠ **Forbidden**	Absolutely Prohibited

The following populations should not use this product	
⃠ **Forbidden**	■This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. ■Children should be supervised to ensure that they do not play with the appliance. ■The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance. ■Patients with osteoporosis. ■Patients with severe heart disease and wearing implantable medical devices such as pacemakers and defibrillators that are susceptible to electromagnetic waves. ■People who have a fever (above 38 degrees). ■Pregnant women or shortly after childbirth and during their menstruation period. ■People who follow medical advice and are prohibited from receiving massage due to thrombosis, aneurysm, severe varicose veins, or other circulatory diseases. Within two weeks after the appearance of blood clots, it is strictly prohibited to massage any form of body parts that have blood clots. ■People with injuries or skin conditions. ■Unsupervised children under the age of 14, or anyone unconscious ■People advised by their doctors to rest or those feeling unwell. ■People with spinal abnormalities or scoliosis are prohibited from receiving this product due to medical advice due to other diseases. ■People with wet bodies.

Safety Precautions (Must be observed)

Important safety warnings	
⚠ **Warnings**	■If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. ■Keep children away from the movable parts of this product. ■Use a properly grounded power source that is compatible with this device. ■Unplug the power cord after use or before cleaning to prevent personal injury or damage to the device. ■Use this device according to the instructions in the manual. ■Do not use any parts or accessories that are not recommended. ■Do not use this product outdoors. ■Do not use near open flames such as stoves, and do not smoke while using. ■Do not use heating equipment such as electric blankets on this product. ■Do not sit on the back of the chair, leg massagers, shoulders, armrests, or stand on the seat. ■Please read the instruction manual before operation. ■Never use this product for any purpose not listed in the manual. ■Limit each use to 20 minutes. ■Do not use this product if the cover or leather is broken or damaged. ■Do not drop anything into this product. ■Never fall asleep while using this product. ■Do not use this product if you are intoxicated or feeling unwell. ■Do not use this product within one hour of eating. ■Do not apply excessive force when using this product to avoid injury. ■Do not use for purposes other than massage. ■Precautions: Keep away from children. Do not store near high temperatures or open flames. ■Fully insert the power plug into the outlet and ensure secure contact during use. ■When using an extension cord, only use nationally certified products. ■Disconnect power when leaving the premises. ■Immediately discontinue use and disconnect the power if abnormal noise, odor, overheating, or malfunction occurs. ■Do not power the unit from lamp socket outlets. ■Total current draw of connected appliances must not exceed the rated current of the main outlet/circuit. ■Never use near flammable/explosive materials. ■Do not disassemble this product or modify its internal wiring, components, or safety features. ■When unplugging, do not pull on the power cord. ■Only use specified fuse ratings - never substitute with conductive materials or incorrect ratings. ■Do not alter the trip settings of circuit breakers or residual current devices.

Safety precautions

Caution

- ■Check whether voltage is consistent with the specification of this product.
- ■Never insert or unplug the power cord with wet hands.
- ■Do not allow water to enter this product to avoid electric shock or damage.
- ■Do not pull the power cord when plugging or unplugging. Avoid rough handling.
- ■Do not damage the wire or modify the circuit of this product.
- ■Do not clean electrical parts, such as the power switch or plug, with a wet cloth.
- ■Stay away from this product during a power failure to avoid injury if power is suddenly restored.
- ■Stop using this product immediately if it malfunctions, and contact your local supplier.
- ■Stop using this product if you feel unwell, and consult your health care practitioner.

Product care and maintenance

Caution

- ■This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission.
- ■Do not forget to turn off the main power switch after usage.
- ■Do not use this product if the power socket is loose.
- ■If the product will not be used for an extended period, roll up the power cord and store it in a dry, dust-free environment.
- ■Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine.
- ■Please clean this product with dry cloth. Never use thinner, benzene or alcohol.
- ■The mechanism of this appliance is specially designed and does not require special maintenance.
- ■Do not puncture this product with sharp objects.
- ■Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.
- ■Please use this product intermittently. Do not keep it working continuously for a long period of time.
- ■ Allow intermittent operation - continuous long-term use is prohibited.

Storage conditions

Caution

- ■Storage room temperature: 5 °C to 40 °C.
- ■Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

Operating environment

Caution

- ■Do not use this product in a highly humid environment, such as a bathroom.
- ■Stop using this product immediately when the ambient temperature changes sharply
- ■Do not use this product immediately after a sudden change in ambient temperature.
- ■Do not use this product in environments with heavy dust or corrosive gases.
- ■Do not use this product in confined spaces or areas with poor ventilation.

Solutions to ordinary malfunctions

Caution

- ■If the motor sounds during operation of this product, this is the normal operation sound.
- ■If the controller is not working normally, check if the power plug and socket are securely connected, and ensure the power switch is turned on.
- ■If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.
- ■Weight limit: 120kg. Heavier users should purchase our reinforced models.

Installation parts

Calf mechanism installation instructions

1.Insert the leg wire and air pipes into the respective front ports of the steel frame assembly. The air pipe with the white-marked clip connects to the white pipe connector. The other air pipe without a marked clip connects to the black pipe connector (Figure 1).
2.After completing the connection, open the calf securing caps on both sides of the steel frame assembly (Figure 2).

Figure 1



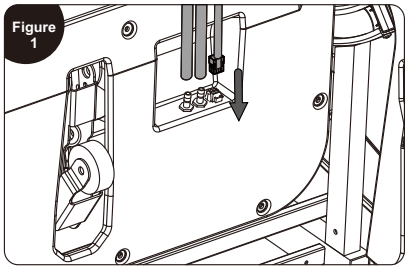


Figure 2

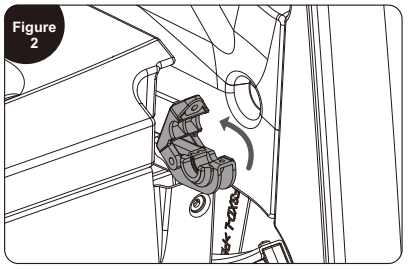

3.Raise the calf section, place it into the slot, cover it with the securing caps, and finally fasten it in place with two M4 screws (Figure 3).

Figure 3

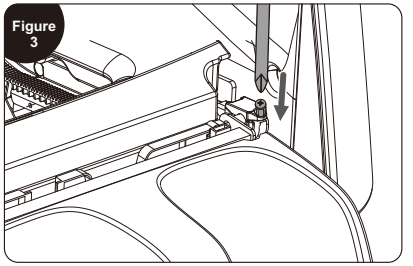

Mobile Phone Holder Use

1.Pull the hooks on both sides of the phone holder outward, extending them by approximately the length of your phone (Figure 1).
2.Move the pole and adjust it to an appropriate angle for use.

Figure 1


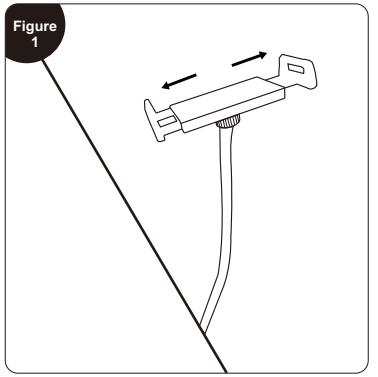


Figure 2

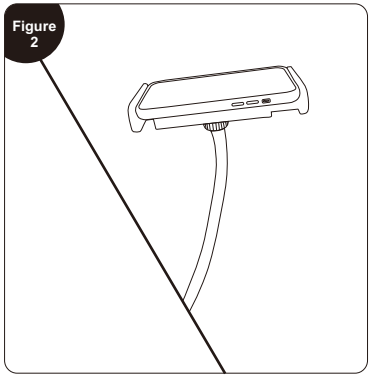

Installation parts

Installation instructions for the aviation plug of the manual controller

2.**Non fixed aviation plug installation method:** Align the arrow marks of the aviation plug (Figure 1) and the aviation plug (Figure 2), then tighten them, and then lock the nut clockwise.

Figure 1


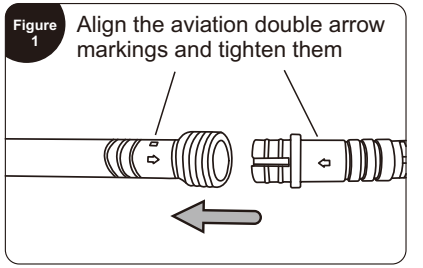


Figure 2

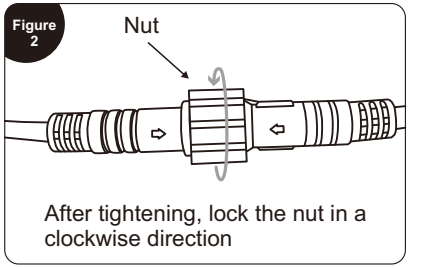


Installation placement

Make sure there is enough space for the massage chair can be tilted at least 5.5 cm.

Caution

Do not expose the massage chair to direct sunlight or high-temperature environments (e.g., in front of heating devices). Place it in an area where it can avoid heat and direct sunlight. For long-term use in a fixed location, it is recommended to place a soft cushion underneath. The cushion should be large enough to cover the area where the chair and the footrest touch the floor.

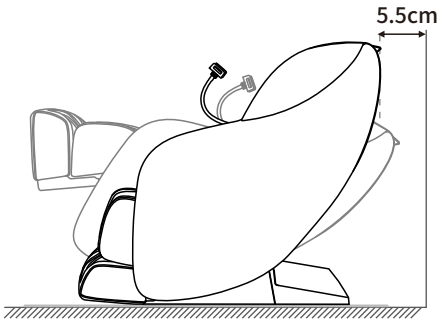


Product lift instruction

Two-person lifting required due to product weight.

Caution

1. Please lift the massage chair when moving it on delicate surfaces, such as wooden floors.
2. When moving on similar surfaces, lifting is recommended to avoid damaging the casters. Be cautious when lowering the chair into the designated position to avoid hand or foot injuries. Do not release the chair until it is completely flat. To prevent floor damage, it is recommended to place a mat or protective covering on the floor.

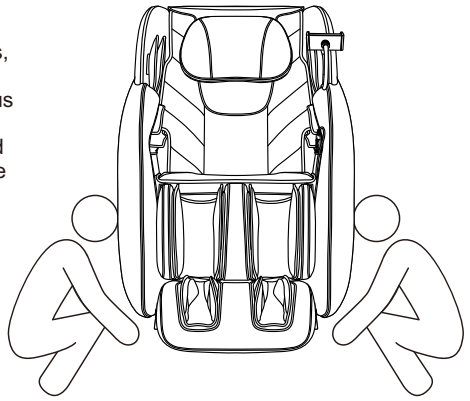


Move method

Use the rear casters to move the massage chair. Tilt the chair backward approximately 45° as shown in the diagram to move it.
NOTE: Excessive force to title will cause the chair to tip over completely and product damage.

Caution


1. Before moving, ensure the massage chair is properly powered off, with both the backrest and calf sections fully reset, and the power supply disconnected.
2. The chair should remain empty during movement; no people, pets, or objects should be on it.
3. Do not move the chair over obstacles higher than 2mm or gaps wider than 5mm.
4. When moving the chair using the casters, avoid continuous movement over distances greater than 50 meters. If necessary, move the chair slowly and at a steady pace.

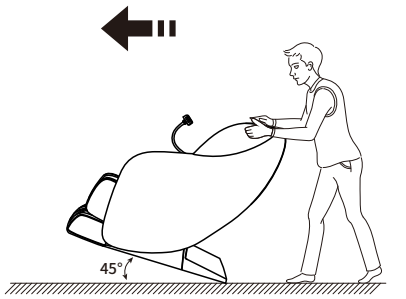


How to disassemble and use headrest cushion and backrest cushion

Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest cushion and the backrest cushion are connected by a zipper (2).

Caution

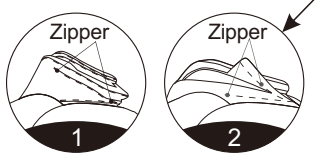


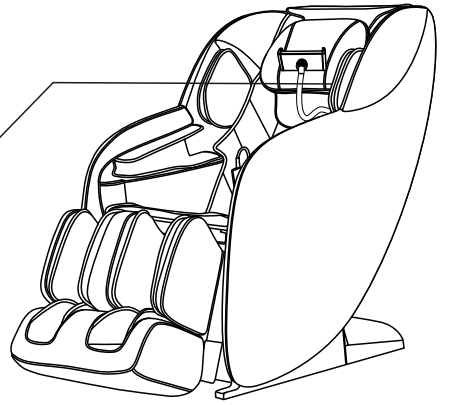

Check around

Caution


Make sure that there are no people, pets and other objects around the unit.

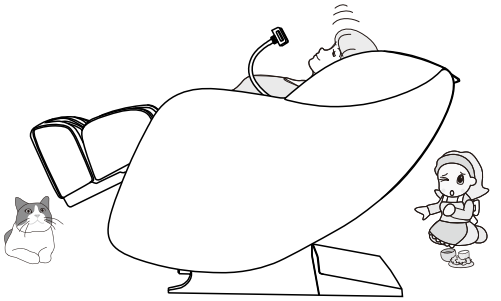

Make sure there are no foreign objects in the gaps of the machine


Caution

Before massaging, make sure that no foreign objects are caught in the legs, feet, etc.
Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule.
Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.

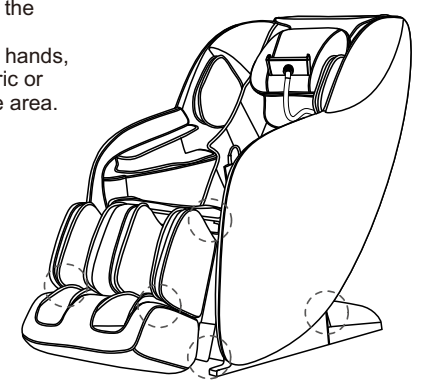


Turn on the power


Caution

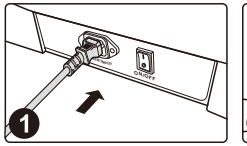

Plug in power cord

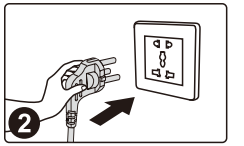

Schematic diagram of power on

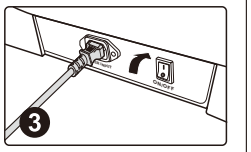


Turn on the power switch ("I" position)

Warnings

- ■Please check the power cord and plug for damage before use.
- ■Please supply power to this product in accordance with the working power requirements of this product's calibration.
- ■It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- ■It is strictly forbidden to connect various power conversion devices without authorization to supply power to this product.

Product structure


Description of components

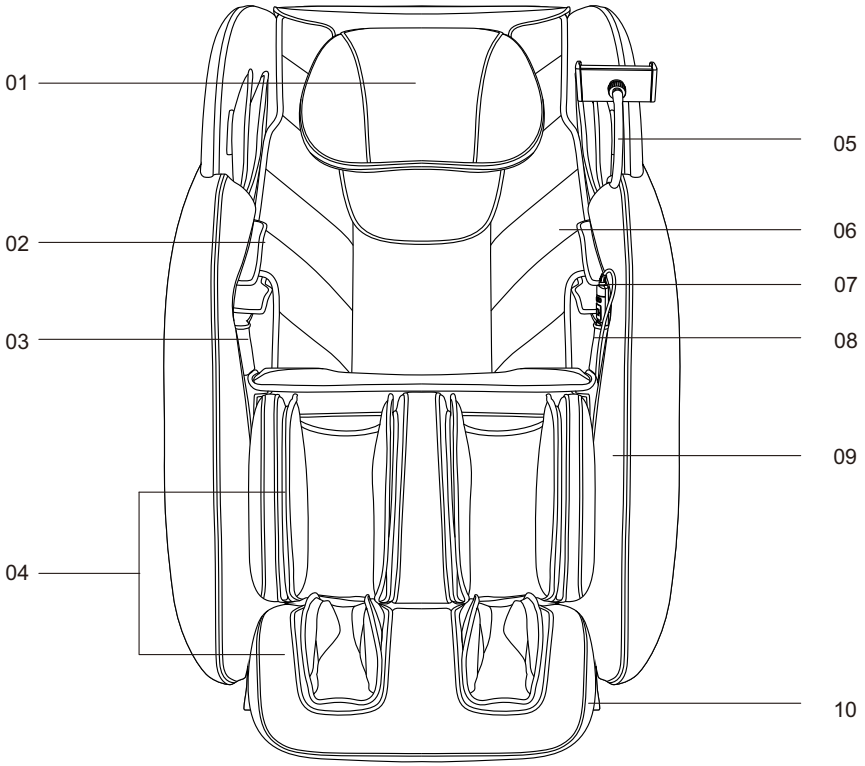

01.Head Cushion
02.Armrest:Air Massage Assembly
03.Pouch
04.Leg Massage Section
05.Mobile Phone Holder
06.Armrest Airbag
07.Remote Control
08.Remote Control Pouch
09.Armrest
10.Side Cover

Product structure

Schematic view of functional distribution

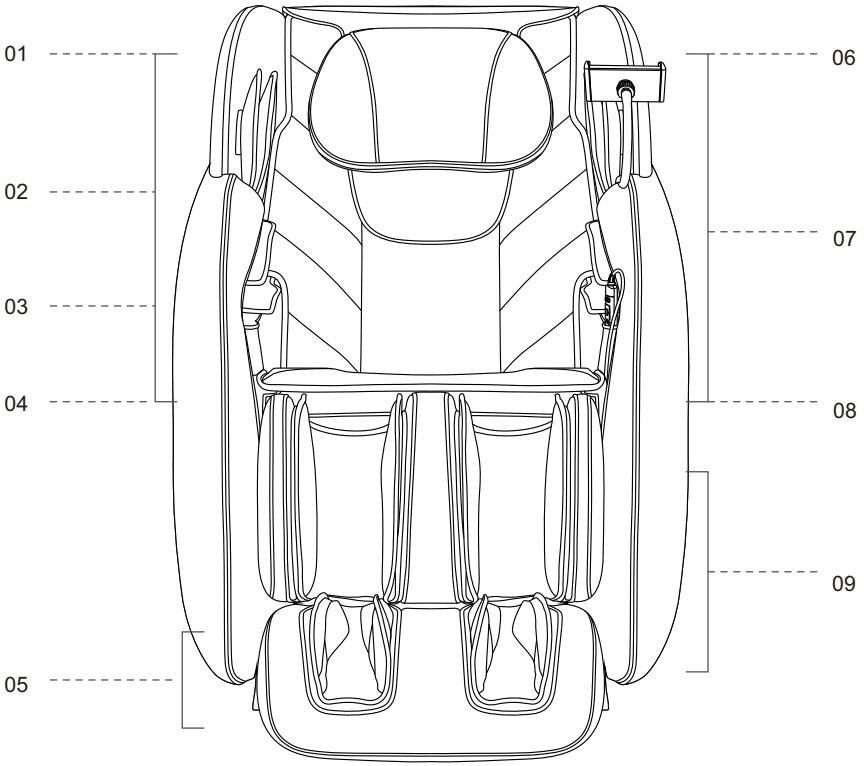

01.Head Sides
- 3D Digital Audio
- Music Playback

02.Shoulder Sides
- Air Massage

03.Head&Neck to Seat
- Manipulator Massage

04.Right Armrest
- Air Massage

05.Feet
- Air Massage
- Rollers + front and back scraping massage
- Ankle Airbag Bump Massage

06.Left Side of The Head
- Voice-activated
- Built-in voice-activated microphone


07.Back
- Heating

08.Left Armrest
- Air Massage

09.Leg
- Air Massage

Product structure

Remote controller keys instruction

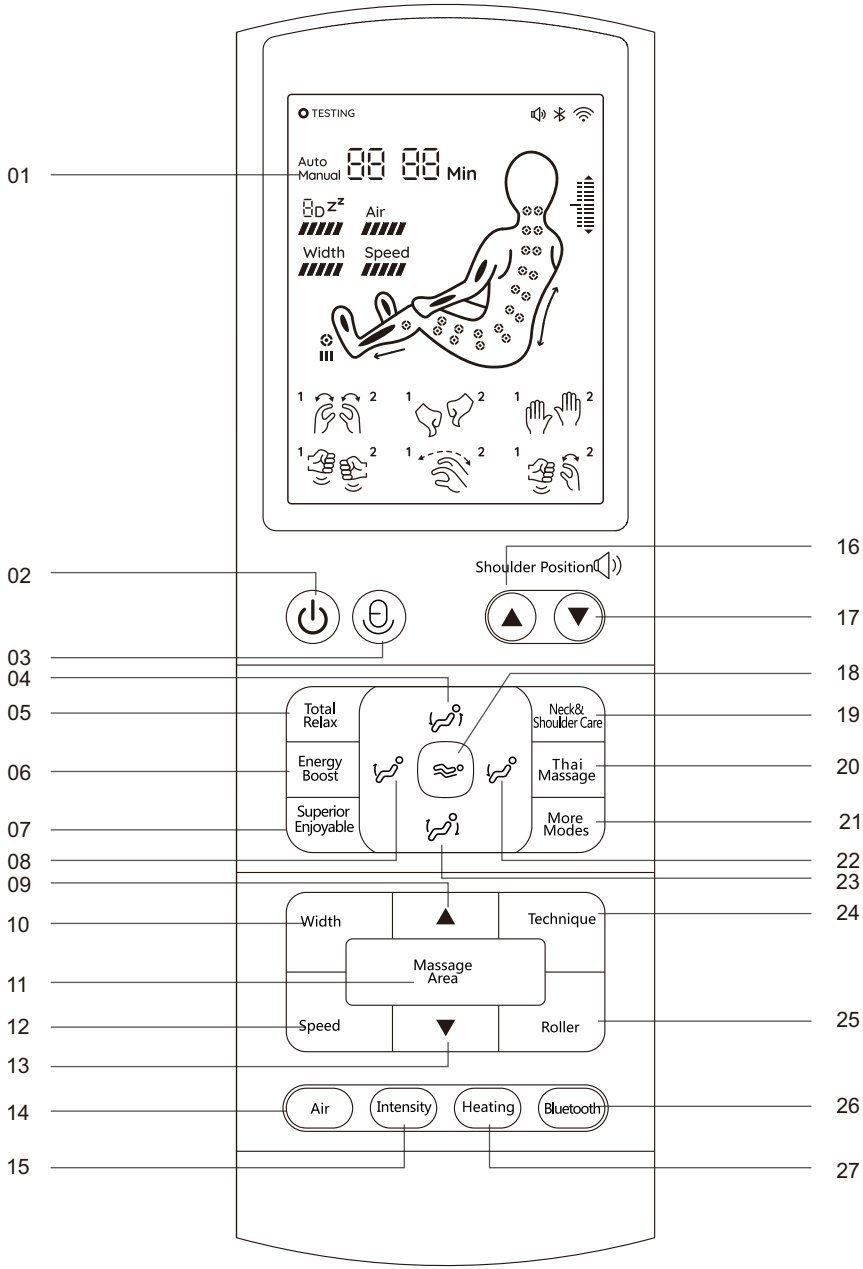



Product structure

01.Display: liquid crystal display which can display the massage function in running state.
02.Power key: Turn the massage chair on or off.
03.Voice key: Long press to turn on or off the voice control function, short press to wake up the voice assistant.
04.Linked Sit-Up Key: Press and hold this button to link the adjustment of the backrest angle upwards, and the calf angle downwards, release to stop the adjustment.
05.Total Relax key: Active Total Relax massage program.
06.Energy Boost key: Active Energy Boost massage program.
07.Superior Enjoyable key: Active Superior Enjoyable massage program.
08.Calf Upward key: Press and hold this button to adjust the calf section upwards, release to stop the adjustment.
09.Massage Up Key: Adjust the massage area upwards
10.Width key: Massage width is adjustable in 5 levels.
11.Area key: Cycle switching massage area selection.
12.Speed key: Massage speed is adjustable in 5 levels.
13.Massage Down Key: Adjust the massage area downwards.
14.Air key: Turn air massage on or off. Cycle through Upper / Lower / Full / Off.
15.Ait Intensity key: Air massage intensity is adjustable in 5 levels.
16.Shoulder / Volume Up Key: Adjust shoulder position upwards. Long press for volume up adjustment.
17.Shoulder / Volume Down Key: Adjust shoulder position downwards. Long press for volume down adjustment.
18.Zero-Gravity key: Zero-Gravity angle adjustment. Cycle through Zero I / Zero II / Off.
19.Neck & Shoulder Care key: Active Neck & Shoulder Care massage program.
20.Thai Massage key: Active Thai Massage massage program.
21.More Auto key: Cycle through more auto massage program.
22.Calf Downward key: Press and hold this button to adjust the calf section downwards, release to stop the adjustment.
23.Linked Reclining Key: Press and hold this button to link the adjustment of the backrest angle downwards, and the calf angle upwards, release to stop the adjustment.
24.Technique key: Turn on or off the massage technique.12 massage techniques available
25.Roller key: Turn on or off the massage rollers. Massage intensity is adjustable in 3 levels.
26.Bluetooth key: Long press to turn on or off the Bluetooth.
27.Heat key: Short press to turn heating function on or off. Long press to turn on or off the low-power mode.

I. Start massage


1.Massage Techniques: Press the **“Power”** button on the remote control to cycle through the massage techniques.

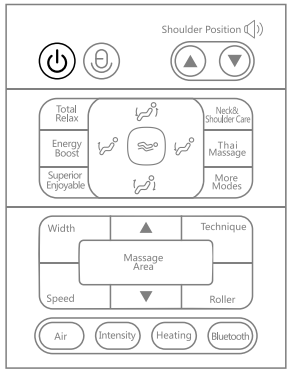


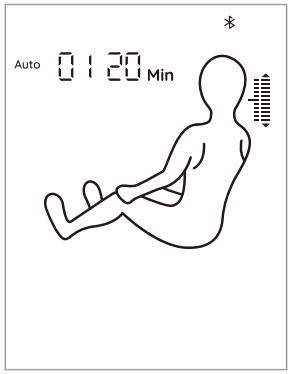

2.After switching on the massage chair will automatically adjust the angle, after adjustment will start human shoulder position detection, at this time, please keep the body and sitting posture and massage chair fit.

3.Shoulder position fine-tuning, after body type detection is completed, the hand controller will prompt the user to fine-tune the shoulder position, if the massage wheel stops at your shoulder position, there is no need to adjust and directly start massage, if not, please use the shoulder position of the "up key / volume up" key or "down key / volume down" key to adjust the massage wheel to your shoulder position and then start the massage. If it is not operated for more than 10 seconds then it will directly default the current massage wheel position as shoulder position and start massaging. Note: Pressing the corresponding key during power on or detection can switch the default automatic programme mode, and pressing it again can skip the detection and enter the massage directly.

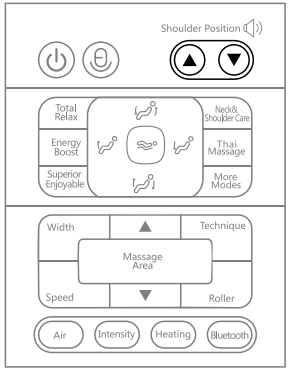

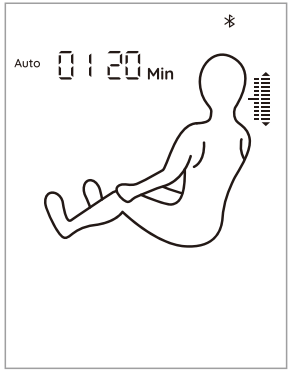


II. Automatic program (please use this function after the chair is turned on)


Auto Programs: Tap the "Auto Program" area on the hand controller and select the desired program to start the massage.

1.1. Program Categories and Selection: The system preset includes 18 auto programs to meet different massage needs. Among them, 5 are special programs with dedicated buttons for direct selection; the remaining programs can be switched via the “**More Modes**" key.

1.2.Special Programs: Total Relax, Energy Boost, Superior Enjoyable, Neck & Shoulder Care, Thai Massage.

1.3 More Modes: Chinese Massage, Fatigue Recovery, Gentle Waves Rub, Meridian Treatment, Waist Care, Leg & foot Relieve, President Cosy, Keep Fit, Office Regimen, Health Recharge, Lunch Break, Warming and detox, Sweet Dream.

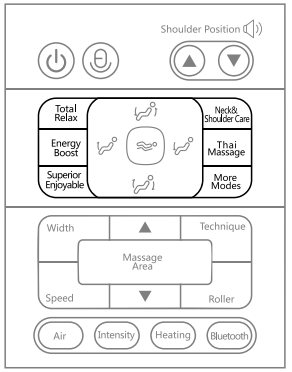

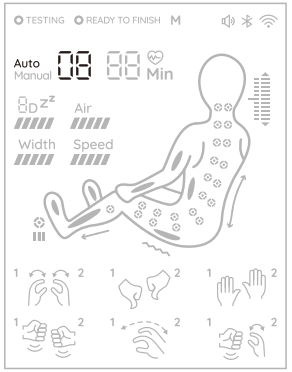

Function	Description	Display
Total Relax	With the aid of flexible guide rails, let the body posture angle closer to lying flat; with the effective anti-arch stretching of movement to the back, achieve zero pressure stretching, effectively relieve lumbar muscle pain, and eliminate fatigue, thus to get a better massage experience, relieve the stress on the body and mind.	01
Energy Boost	Deeply massage the whole body by means of kneading, tapping and Shiatsu techniques, to wake up the vitality of the human body and stimulate the energy.	02
Superior Enjoyable	Apply air massage on the whole body, with the foot roller and calf kneading massage. Calf stretching function is canceled, suitable for the elderly and people suffering stress on back. The massage intensity is gentle.	03
Neck & Shoulder Care	Massage the neck and shoulders by means of kneading and stretching techniques mainly, and also the upper back by medical massage, and then press the Jianjing acupoint to relieve cervical spondylosis and achieve the effect of relaxing the muscles of the neck and shoulders. Massage intensity is gentle, suitable for people working in office and suffering from cervical fatigue.	04

Thai Massage	Mainly use calf and backrest electric push rod to clamp legs, hands and shoulders with the aid of air massage, and then apply stretching massage, while the movement holds against the back and waist for medical massage, so that the body is in the Thai stretching state. It is suitable for people under high stress to improve their head-down on chest and humpback. Massage intensity is strong.	

More modes		
Function	Description	Display
Chinese Massage	By means of Traditional Chinese medicine massage technique mainly, apply massage on the back and waist so as to promote the blood circulation of the back and waist, soothe the meridians and relieve the blockage of the back and waist through massage. It is suitable for people with back and waist pain, and lumbar muscle strain. Massage intensity is gentle.	
Fatigue Recovery	Apply deep pressure on the neck, back and waist, buttocks, and legs by means of kneading, patting, finger pressing techniques mainly to relieve the fatigue on body, allowing the body to better relax.	
Gentle Waves Rub	Apply full air massage mainly, with the use of airbags for cross circulation of kneading and pressure, so as to promote blood circulation, alleviate pain in various body parts, and deeply relieve muscle fatigue. (Remarks: full air massage mainly, with frequent air massage action)	
Meridian Treatment	By means of kneading, patting, finger pressing and medical massage techniques mainly, clamp the legs, hands and shoulders with the aid of air massage, and then apply stretching massage to soothe the meridians, promote blood circulation, relieve blockages in the body.	
Waist Care	Massage the waist by kneading, kneading&tapping, tapping, and then perform 4D massage of the waist	
Leg & foot Relieve	Massage the shoulders and waist by means of kneading, tapping, kneading and tapping mainly, apply air massage on the calfs and feet for squeezing massage, allowing more soothing calf and foot massage.	


President Cosy	Massage the shoulders, neck, back and waist by means of kneading, tapping, kneading and tapping mainly, to relieve fatigue, promote blood circulation, and release stress by such deep massage. It is suitable for men, and the massage intensity is moderate.	
Keep Fit	Massage the shoulders, neck, waist and hips by means of kneading and Shiatsu techniques, through the massage on the whole body, to relax the body and mind, and enjoy the queen-level treatment. It is suitable for women. Massage intensity is gentle.	
Office Regimen	Massage the shoulders, neck and waist by means of kneading, tapping, kneading and tapping techniques mainly, to relieve shoulder and neck pain, improve lumbar muscle soreness and maintain lumbar spine through such deep massage. It is suitable for office white-collar and sedentary people.	
Health Recharge	Deeply massage the whole body by means of kneading, tapping and Shiatsu techniques, to promote blood circulation throughout the body and prevent blood clots. It is suitable for people who live at home for a long time and do not like to go out, and the massage intensity is moderately gentle.	
Lunch Break	Massage the back and waist by means of kneading and tapping techniques, and press the Shenyu acupoint, to improve the quality of lunch break, so that the user is more energetic in afternoon work.	
Warming and detox	Deeply massage the whole body by pressing related acupoints by means of kneading, patting, finger pressing and other massage techniques, to let the stimulation fully reach the deep layer of muscle tissue, feel warm locally combined with the function of hot compress, and regulate the Qi and blood in a bid to achieve the effect of warmth and damp expelling. (Note: the whole body massage together with hot compress)	
Sweet Dream	Massage the shoulders, neck, back and waist by means of kneading and medical massage techniques, and press the acupoints of Fengchi and Shenyu, to improve the sleep quality and help sleep. It is suitable for people suffering from poor sleep, and the massage intensity is gentle.	

III. Automatic program(Please use this function after power on)


1.Massage Technique: Select the **“Technique"** button on the hand controller and press it to cycle through massage techniques. The system preset includes 12 techniques: Stop, Kneading (4 techniques), Tapping (2 techniques), Kneading & Tapping (4 techniques), Shiatsu.

Function	Massage roller adjustment	
Stop	The width and be adjusted.	5 speed levels adjustable 5 width levels adjustable
Knead I	The speed and be adjusted.	
Knead II	The speed and be adjusted.	
Knead III (flashing)	The speed and be adjusted.	
Knead IV (flashing)	The speed and be adjusted.	
Tap I	The speed, width and be adjusted.	
Tap II	The speed, width and be adjusted.	
Knead&Tap I	The speed and be adjusted.	
Knead&Tap II	The speed and be adjusted.	
Knead&Tap III (flashing)	The speed and be adjusted.	
Knead&Tap IV (flashing)	The speed and be adjusted.	
Shiatsu	The width and be adjusted.	

2.Massage Speed: To adjust massage speed, enter manual mode and press the **"Speed"** button on the hand controller to cycle through speed levels (Each press changes one level, Speed is adjustable from levels 1 to 5, with level 1 being the slowest, and level 5 being the fastest). Speed adjustment should be applied to the following massage techniques: Knead (Knead I - Knead IV), Tap (Tap I - Tap II), Knead&Tap (Knead&Tap I - Knead&Tap IV).

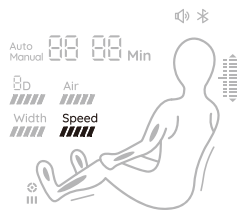Massage speed display.	Massage speed adjustment
	level 1 level 2 level 3 level 4 level 5

3.Massage Width: To adjust massage width, enter manual mode and press the **"Width"** button on the hand controller to cycle through width levels (Each press changes one level, Width is adjustable from levels 1 to 5, with level 1 being the narrowest, and level 5 being the widest). Width adjustment should be applied to the following massage techniques: Stop, Tap(Tap I-Tap II), Shiatsu.

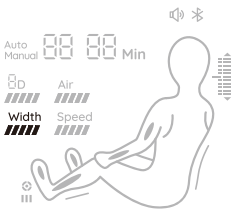Massage width display	Massage width adjustment
	level 1 level 2 level 3 level 4 level 5

4.Massage Area: To adjust massage area, enter manual mode and press the **“Massage Area"** button on the hand controller to select the massage area (each press cycles through the available areas: "Spot, Partial, Upper Body, Lower Body, Full Back", 5 modes in total).

Massage Area display	Massage Area adjustment
	Spot H0 Partial H1 Full H2 Upper H3 Lower H4


Function	Description	
Spot	Massage at a spot location	When selecting spot point and partial massage techniques, the massage area can be adjusted through the "up key" and "down key" next to the massage mechanism key of the remote controller under the status of information interface.
Partial	Round-trip massage in a small area	
Full	Round trip massage on the upper back.	
Upper	Round trip massage on the lower back.	
Lower	Round trip massage on full back.	

IV.Air Pressure Function (please use this function after the chair is turned on)

1.Air Pressure Mode: Press the **"Air "** button on the hand controller to select an air pressure mode. The modes are: Full Body, Lower Body, Upper Body, and OFF (disables air pressure function). “Off” to turn off the air massage function.

Air pressure displayed		
Upper Air Massage	Lower Air Massage	Full Body Air Massage
		


2.Air Intensity: To adjust air pressure intensity, first turn on the air pressure massage function, then press the **"Intensity"** button on the hand controller to cycle through intensity levels (Intensity is adjustable from levels 1 to 5, with level 1 being the weakest, and level 5 being the strongest).

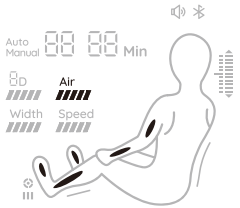Air pressure intensity display.	Adjustment of air pressure intensity
	


IV. Other Function (please use this function after the chair is turned on)

1.Heating: Short press the **“Heating”** button on the remote control to turn on or off the back heating function. There is a noticeable warmth after activating the heating function for 3 minutes.


2.Low-Power mode: Long press the **“Heating”** button on the remote control to turn on or off the Low-Power mode. After activating the low-power mode, the massage chair enters a low-power state when powered off, turning off all functions. It can only be turned on using the power button on the remote control

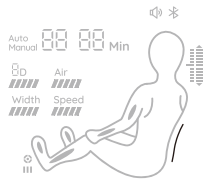Heating Display	Low-Power Mode Display
	

3.Sole Roller: Press the **“Roller”** button on the remote control to turn on or off the sole roller function. The rollers speed is adjustable in 1 to 3 level. Each press of the roller button increases the speed by one level. Pressing it a fourth time turns off the sole roller function, cycling through the options in sequence.

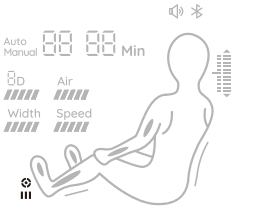Speed Display	Speed Adjustment
	

4.Volume Adjustment: Long press the **“Shoulder / Volume Up”** or **“Shoulder / Volume Down Key”** button for shoulder position adjustment on the remote control to adjust the volume.

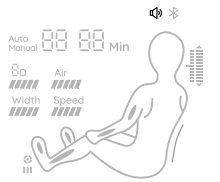Heating Display


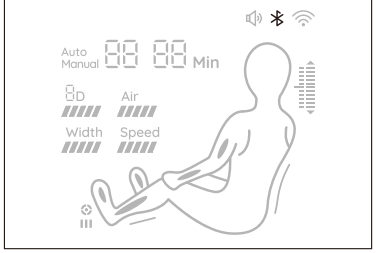
5.Bluetooth: Press the **“Bluetooth”** button on the remote control to turn on or off the Bluetooth function. After activating the Bluetooth function, you can pair and connect Bluetooth-enabled audio devices (such as smartphones, MID tablets, etc.) with the massage chair's Bluetooth module. This allows music played on the audio device to be wirelessly transmitted by Bluetooth to the massage chair's sound system for playback.

5.1.Enter the main menu of your smart device, open “Settings” → select the “Bluetooth” option → turn on the “Bluetooth” → Bluetooth will automatically “search for new Bluetooth devices”.

5.2.The smart device will detect the corresponding Bluetooth model (e.g., IMCM-XXXX). Tap the pair button; If prompted whether to pair with this device, select “Pair” to complete the pairing process.

5.3.Open the music player on your smart device and select a song to play.

Bluetooth Display



6.Voice Control: Long press the **“Voice”** button on the remote control to turn on or off the voice control function. When voice control is active, short press this button to activate the voice assistant, or speak “Hi Alice” or “Hey Alice” near the left speaker to wake it up. When the voice assistant responds with “I'm here,” it indicates activation. After activating the voice control, you can use voice commands to operate the massage chair.

6.1.After waking up the voice assistant, please say the command within 6s to realize the function control of the massage chair. You can continue to say a command after the voice assistant responds to the previous command, but the interval between two adjacent commands shall be no more than 6s, or you need to wake up the voice assistant again. The detailed list of voice commands is as follows.Attention: When awakening the voice control function, the speaking speed should not be too fast, and voice commands should be issued according to Voice Control Entry.

Voice Control Entry		
Entry: “Hi Alice” or “Hey Alice”. Answer: I'm here		
No.	Voice control entry	Answer entry
01	Massage close	Answer: Ok, Massage close
02	Massage on	Answer: Ok, Massage on
03	Total Relax	Answer: Ok, Total Relax

04	Energy Boost	Answer: Ok, Energy Boost
05	Sweet Dream	Answer: Ok, Sweet Dream
06	Neck & Shoulder Care	Answer: Ok, Neck & Shoulder Care
07	Lunch Break	Answer: Ok, Lunch Break
08	Thai Massage	Answer: Ok, Thai Massage
09	Open the air pressure	Answer: Ok, Open the air pressure
10	Close the air pressure	Answer: Ok, Close the air pressure
11	Up the seat position	Answer: Ok, Up the seat position
12	Down the seat position	Answer: Ok, Down the seat position
13	Change the other mode	Answer: Ok, Change the other mode
14	Go little down	Answer: Ok, Go little down
15	Go little up	Answer: Ok, Go little up

Note: commands 14 and 15 can only be used after command 13

V. Angle adjustment (please use this function after the chair is turned on)

1.Zero-gravity display

Function	Description
Zero	Press the “Zero” button on the remote control to cycle through the zero gravity angle options (2 angle options available). Each press switches to the next angle in the cycle.

2.Leg mechanism angle

Function	Description
	Leg mechanism descending key: press and hold this key the leg mechanism slowly descending, release it to stop descending; when adjusting to the limit position, it will stop adjusting and emit a "drip drip" sound.
	Leg mechanism rising key: press and hold this key the leg mechanism rises slowly, release it to stop rising; when adjusting to the limit position, it will stop adjusting and emit a "drip drip" sound.


3.Whole body angle

Function	Description
	Linkage descending key: press and hold this key, the backrest mechanism slowly descends while the leg mechanism slowly rises, release it to stop the backrest mechanism from descending and the leg mechanism from rising; when adjusting to the limit position, it will stop adjusting and emit a "drip drip" sound.
	Linkage Rise Key: Press and hold this key, the backrest mechanism rises slowly and the leg mechanism falls slowly at the same time, release it to stop the backrest mechanism from rising and the leg mechanism from falling, and it will stop adjusting when it reaches the limit position and emit a "drip drip" sound.


VI. End the massage

During the massage session:
1.Press the “power” button on the remote control to turn off all massage functions and reset the massage chair to its default angle.
2.Use the voice command to shut down the massage chair, which will turn off all massage functions and reset the massage chair to its default angle.
3.When the timer ends, all massage functions will turn off, but the massage chair will not reset to its default angle.


Cut off the whole machine power supply, as shown in the figure (Schematic diagram of power switch position of the whole machine).

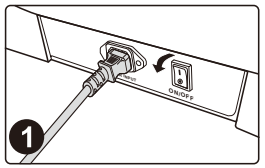

Turn off the power switch ("0" position)

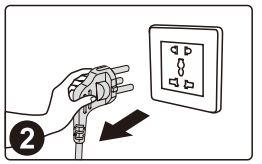

Schematic diagram of pulling out the power plug

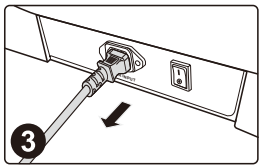

Remove the product connection power cord

Cleaning synthetic leather and plastic parts

Wipe the leather with a soft, dry cloth.

■Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.

■When using commercially available leather care products (rags), please follow the instructions for use.

■If synthetic leather is particularly dirty, wipe it in the following way.

①Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.

②Use the above soft cloth to wipe the leather surface.

③Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.

④Wipe with a wrung soft cloth.

⑤Let it air dry naturally.


■When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.

■Do not use a hair dryer to dry the surface.

■Be careful when wiping the machine with denim and colored fabrics, as the color of the fabric will stain the surface of the synthetic leather.

■Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.

■Synthetic leather may be discolored, so when using hair dye, please cover the touched part with a towel.

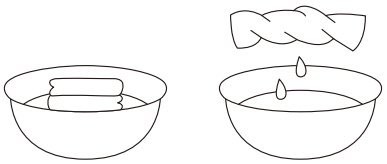



Troubleshooting

Fault	When the calf mechanism or the backrest reaches a certain position, press the corresponding adjustment button and it will no longer change, and a continuous "beep, beep" sound will be emitted.
Solution	Due to product structure design and ergonomic requirements, this product has a limited protection design for the limit state of attitude adjustment. At the same time, a reminder sound will sound when the limit is reached.

Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.

Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal phenomenon. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.

Fault	The massage wheel did not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.

Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or doubts about this product.

Product specifications

Model: Enjoyfy (A2805)
Name: Massage Chair
Rated voltage: 110-120V~ 60Hz ▭
220-240V~ 50Hz/60Hz ▭
Rated power:100W
Rated time: 20min
Safety structure: Class I

Producer:
Zhejiang Haozhonghao Health Product Co., Ltd
No.18 XingLong Road, Furniture Garden, Wanquan Industrial Base, Pingyang, Zhejiang, China
e-mail: irest@irest.com

Importer and authorized representative in the EU:
iRest Europe Sp. z o.o.
Szewczenki 7/11
email:e-mail: irest@irest-europe.com

Bluetooth frequency range and power of 2.5 mW
Manufacturer's declaration: Product is compliant with Directive: 2014/53/EU.
SAVE THESE INSTRUCTIONS
Dear user, you can contribute to environmental protection.
Be environmentally responsible and return your used equipment to the relevant collection point designated by your local administration. The materials used to manufacture the device may be valuable recyclable resources and, if disposed of incorrectly, can pose a risk to the natural environment.
Remember - do not dispose of the device together with your household waste.;



CE